

Hand clamp cutter for Oetiker ear clamps

Specially designed for removing Oetiker Ear Clamps, quick and easy ear clamp cutting.

Compound Action Hand Clamp Cutter
Sargent Tool No. 9257 CT

Clamp removal instruction guide

1. Place hand clamp cutter jaw tips on each side of clamp ear or single leg (Fig. 1).

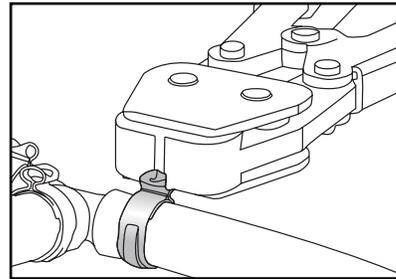


Fig. 1: Correct jaw tip placement

2. Squeeze handles (Fig. 2).

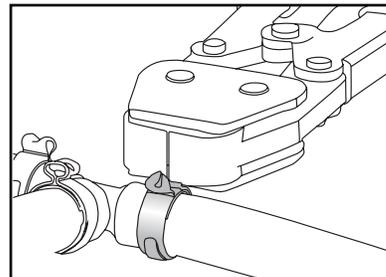


Fig. 2: Squeeze handles

3. Cut through and remove clamp (Fig. 3)

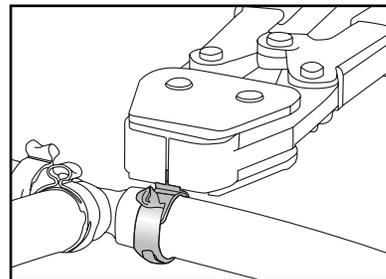


Fig. 3: Cut and remove clamp

NOTICE

- ▶ Caution must be observed with Hand Clamp Cutters, they can generate extreme forces.
- ▶ It is recommended that protective eye wear be worn when cutting clamps.